


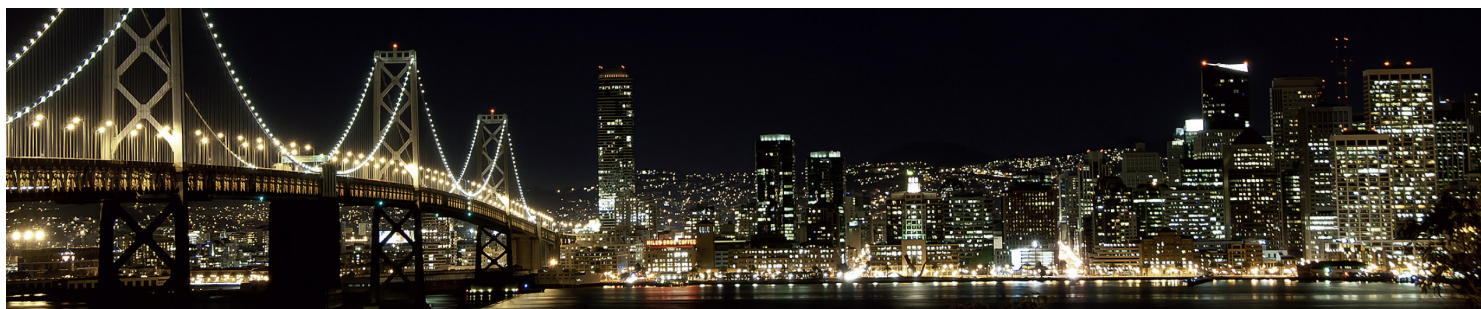

ALOHA+ H₂O

Gas Analyzer for Trace Moisture in Ammonia

GASES & CHEMICALS

CEMS

ENERGY

SEMI & HB LED

ATMOSPHERIC

LAB & LIFE SCIENCE

Designed for trace level moisture analysis in ammonia, the ALOHA+ H₂O offers:

- 3 parts-per-billion (ppb) detection capability in ammonia (NH₃) and sub-ppb in inert matrices
- Rapid response time
- Wide dynamic range
- Absolute and calibration-free measurement technology
- Extremely low cost of ownership
- User-friendly touchscreen and remote communication

The superior analytical solution for your High-Brightness LED needs

The ALOHA+ H₂O advances moisture detection in ammonia (NH₃) to unprecedented levels. The analyzer provides specialty gas and High-Brightness LED makers with the exceptional detection limits, accuracy, reliability, speed of response and ease of operation that Tiger Optics customers have come to expect. LED manufacturers rely on Tiger Optics' family of proven Cavity Ring-Down Spectroscopy-based moisture sensors to ensure the ammonia

process gas is of the high quality necessary to produce High Brightness LEDs.

The cost effective analyzer is quick to install, easy to use and effortless to maintain. There are no off-line periodic sensor maintenance procedures, no span calibrations, no purifier replacement and no pump rebuilds required. The ALOHA+ H₂O analyzer is fully self-calibrating and the "bright" choice for your detection needs!

Tigeroptics
a Process Insights Brand

ALOHA+ H₂O

Gas Analyzer for Trace Moisture in Ammonia



Performance	
Operating range	See table below
Detection limit (LDL, 3σ/8h)	See table below
Precision (1σ, greater of)	± 1% or 1/3 of LDL
Accuracy (greater of)	± 4% or LDL
Speed of response	< 5 minutes to 95%
Environmental conditions	10°C to 40°C 30% to 80% RH (non-condensing)
Storage temperature	-10°C to 50°C

Gas Handling System and Conditions*	
Wetted materials	316L stainless steel 10 Ra surface finish
Gas connections	1/4" male VCR inlet and outlet
Leak tested to	1 x 10 ⁻⁹ mbar l / sec
Inlet pressure	10 – 125 psig (1.7 – 9.6 bara)
Outlet pressure	<2 Torr (2.7 mbar)
Flow rate	up to 1.8 slpm (gas dependent)
Sample gases	Ammonia (NH ₃) & inert matrices
Gas temperature	Up to 60°C

Dimensions	H x W x D [in (mm)]
Standard sensor (incl. shutoff valves)	8.73 x 8.57 x 26.4 (222 x 218 x 670)
Sensor rack (fits up to two sensors)	8.73 x 19.0 x 26.4 (222 x 483 x 670)

Weight	
Standard sensor	34 lbs (15.4 kg)


Electrical	
Platform	Max series analyzer
Alarm indicators	2 user programmable 1 system fault Form C relays
Power requirements	90 – 240 VAC, 50/60 Hz
Power consumption	40 Watts max. (excluding vacuum pump)
Signal output	Isolated 4–20 mA
User interfaces	5.7" LCD touchscreen 10/100 Base-T Ethernet USB, RS-232, RS-485
Data storage	Internal or external flash drive
Certification	CE Mark

Performance, H ₂ O:	Range	LDL (3σ)	Precision (1σ) @ zero
In Ammonia	0 – 20 ppm	3 ppb	1 ppb
In Nitrogen	0 – 6 ppm	0.5 ppb	0.2 ppb
In Helium	0 – 3 ppm	0.3 ppb	0.1 ppb
In Argon	0 – 4 ppm	0.4 ppb	0.15 ppb
In Hydrogen†	0 – 6 ppm	0.5 ppb	0.2 ppb

*Vacuum source required

†Please ensure that the vacuum source used meets all safety requirements for use in pure hydrogen.

U.S. Patent # 7,277,177



Equipamientos Analíticos S.A

DESDE 1989 | BRINDANDO SOLUCIONES